



John Deere 1900 / 1910 Overall Assembly

1) Hardware for this assembly comes with the respective upper and lower hardware kits.

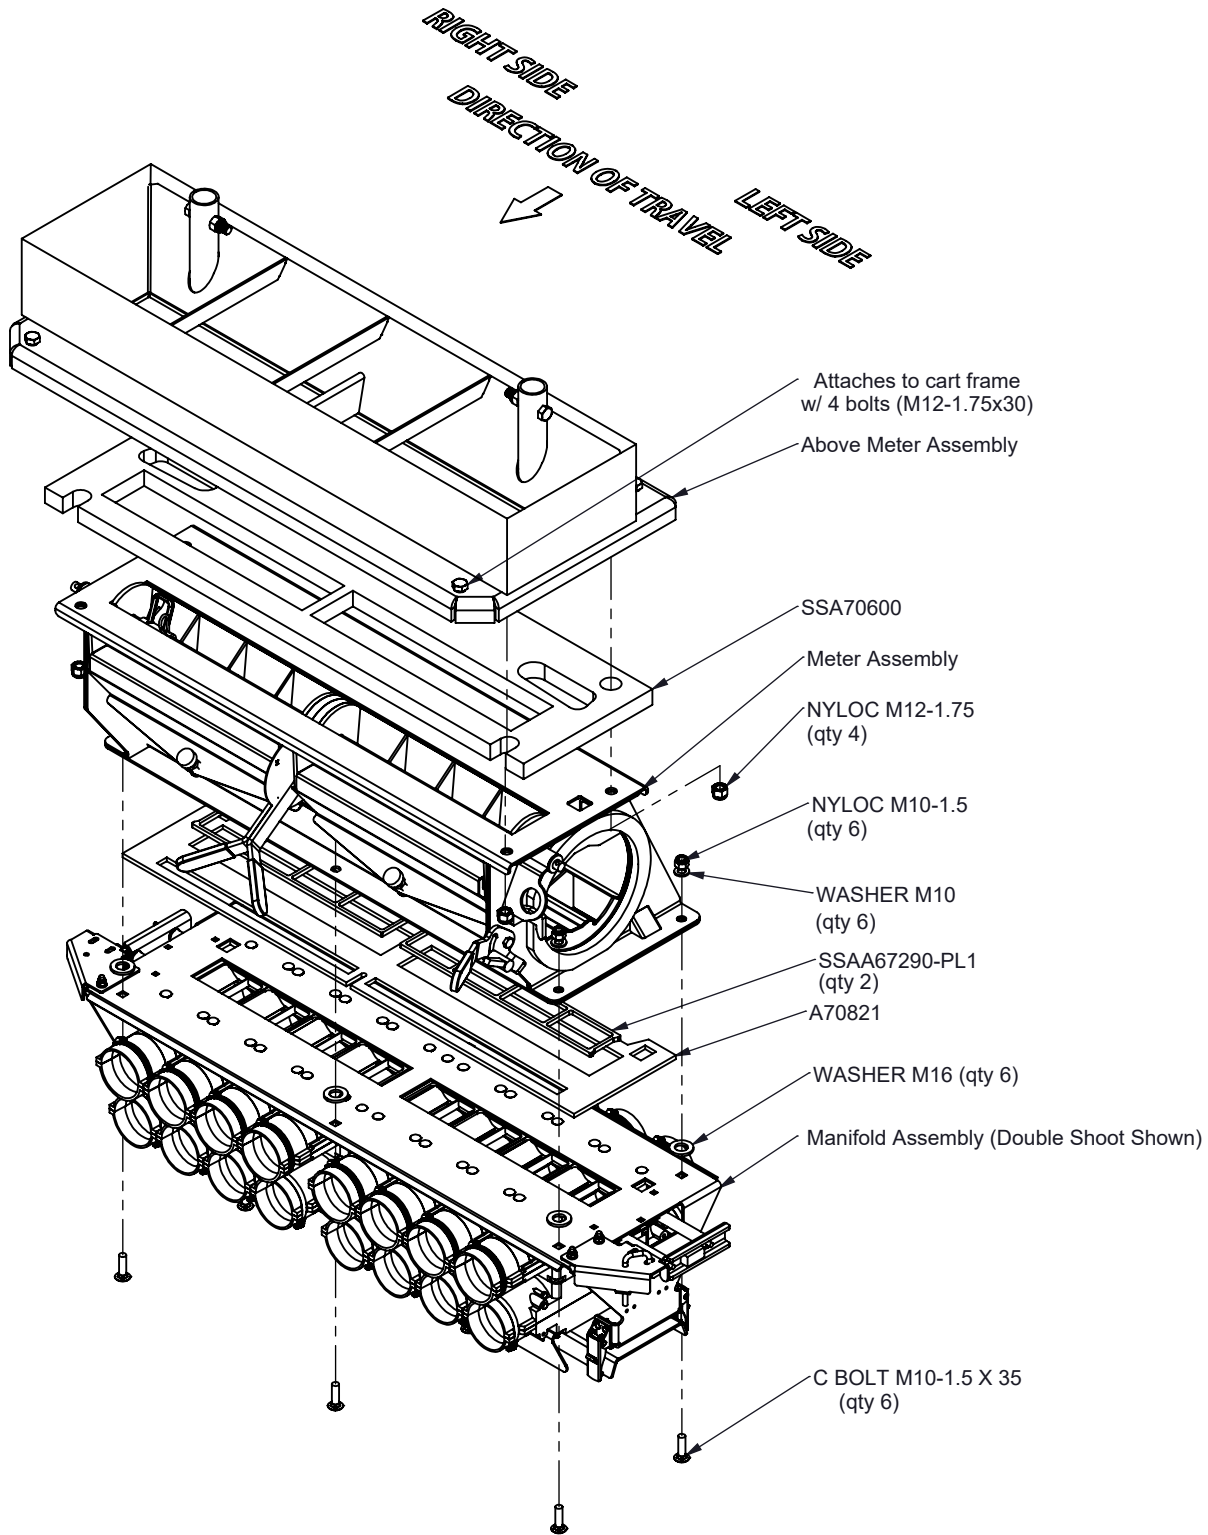


John Deere 1900 / 1910 Above the meter Assembly

- A) Hardware included in package "UHK1-SS"
- B) Trim stud flush to M12 nut after attaching funnel to base plate

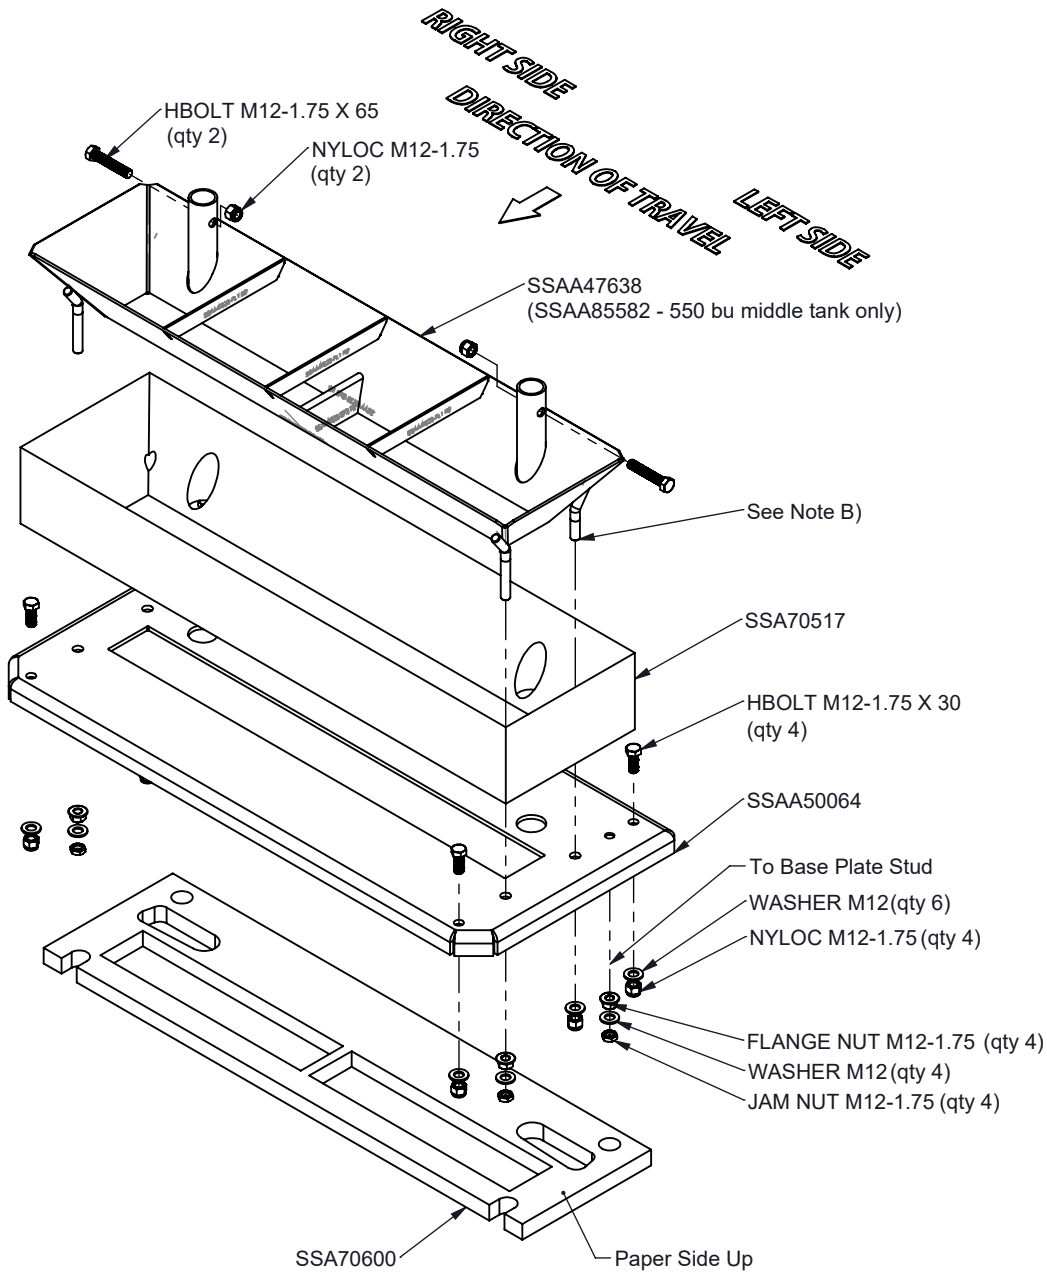


John Deere 1900 / 1910 Meter Housing Assembly

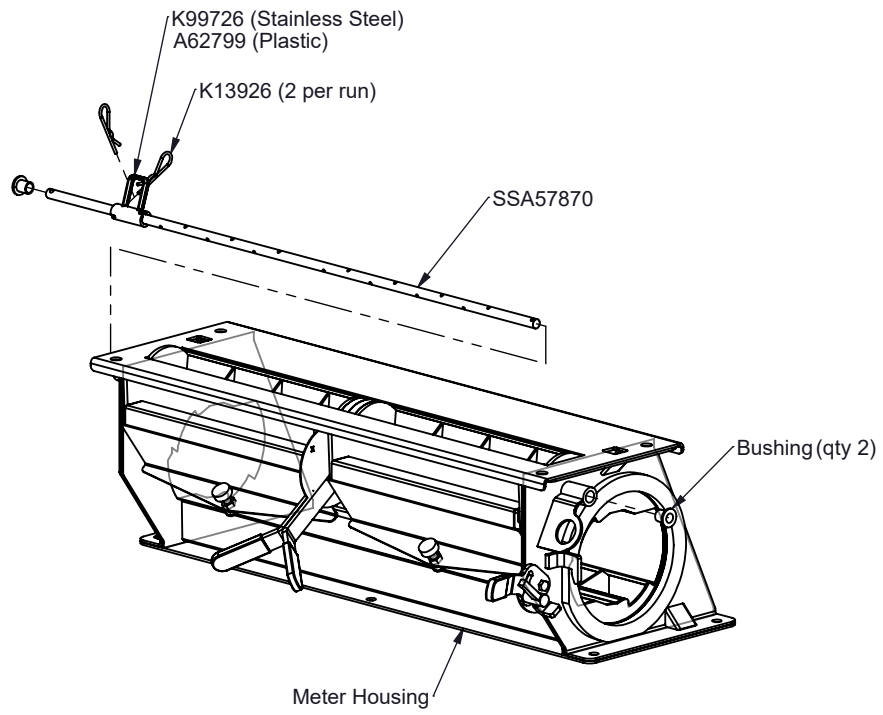


John Deere 1900 / 1910 Double Shoot Slide Assembly

A) Ensure correct orientation of plastic parts as shown

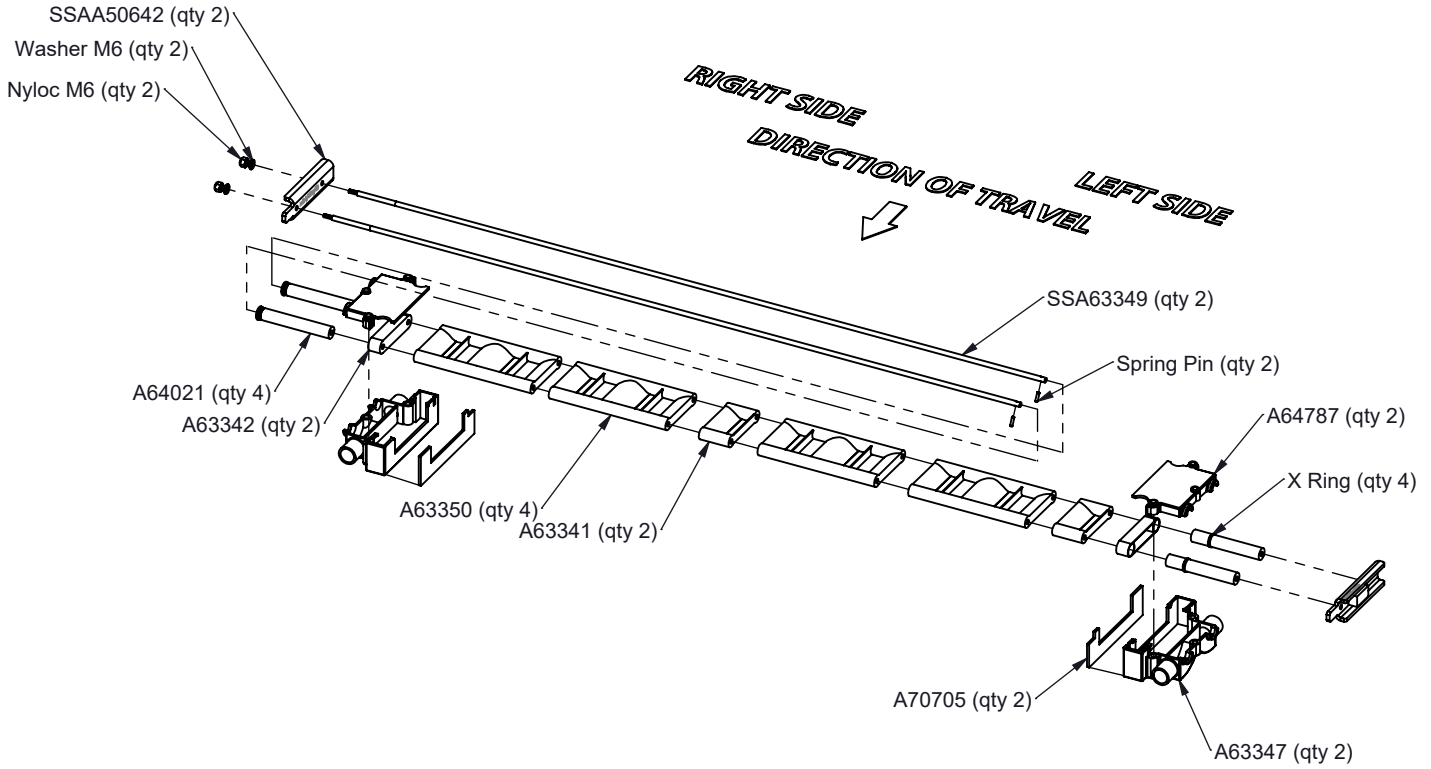

John Deere 1900 / 1910 Double Shoot Slide Stop Assembly

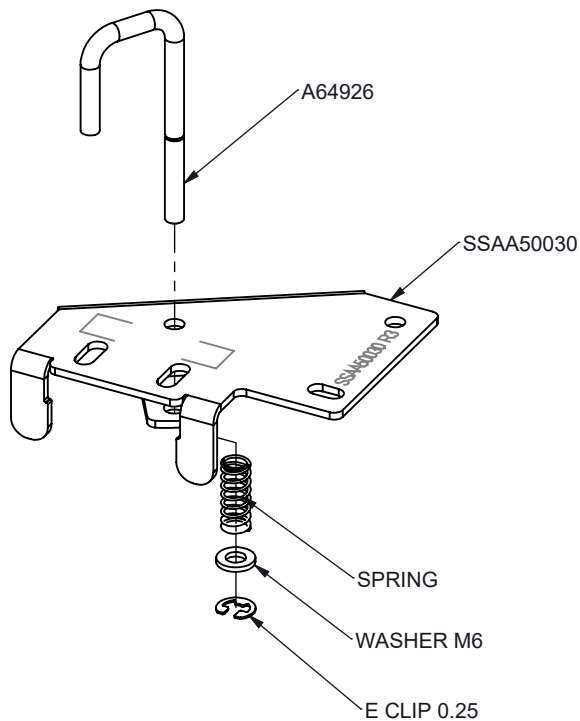

John Deere 1900 / 1910 Below The Meter Assembly (Double Shoot)

- A) Hardware included in package "LHK2-SS" and "MHK2-SS"
- B) Stack washers as shims to set proper cleanout seal
- C) Use fill plate based on runs installed on your cart
- D) Plastic manifold assembly is shown in Tow Behind configuration, reverse for Tow Between

